

### WARNINGS & NOTICE

**WARNINGS** ⚠

- Keep the diffuser out of reach of children.
- Do not move when it is filled with water.
- Do not fill water in use.
- Do not exceed the maximum water level line.
- Place unit on stable, level surface. Do not block steam outlet.
- Unplug power supply during maintenance. Do not use if cord is damaged. Do not pull forcefully on cord and keep clear of pathways.
- Clean the water tank weekly.
- When not in use, remove water from tank.
- This appliance is not intended for the use of children. Anyone planning to use this product must read the instructions thoroughly before use.
- Before adding water and cleaning should first disconnect the power.

**NOTICE:**

- The product is subject to change without prior notice.
- Pictures for reference only.
- Patented products, rights reserved.

— Page 5 —

### TROUBLESHOOTING & SUPPORT

Problem	Cause	Solution
Product stops working	Water below minimum threshold	Refill as per operational instructions 1-6
	Power cables disconnected or damaged	Check connection to the diffuser Check connection to the USB plug adapter Check there is no damage to the cable - replace if necessary (contact customer services)
Water is over the max fill line	Too much water has been added	Remove excess water to below the max line
Issue of water smell when product is not in use	The diffuser has not been cleaned regularly	Clean the diffuser as per instructions
Little or no mist is being produced	The diffuser has not been cleaned regularly	Clean the diffuser as per instructions
The glass cover and inner cover do not fit properly	The covers have been incorrectly installed	Remove both covers and reinstall taking care to place them in the correct position
Water is leaking from the diffuser	Covers could be misaligned or tank overflow	Remove then replace both covers ensuring they are not misaligned.
		If tank is overfilled then disconnect from power and remove some of the water.

— Page 6 —

### WARRANTY & SUPPORT

This diffuser comes with a UK limited 1 year warranty. For our full terms and conditions and to register your warranty please visit [www.love-my-skin.co.uk](http://www.love-my-skin.co.uk)

For questions on this diffuser please contact us on:  
**hello@love-my-skin.co.uk**

Love My Skin / Kinetik Medical Devices Ltd  
 Medicity D6,  
 Thane Road  
 Nottingham  
 NG906BH, UK  
 +44 115 7840090

Symbol for "Manufacture Date".  
 Symbol for "Fragile; handle with care".  
 Symbol for "Environment Protection" - Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.  
 Symbol for "Complies with EU requirements".  
 Model Reference.

LMSD2 UK IB 20180816

— Page 7 —

LOVE MY SKIN

## Luxury Glass Diffuser



**"Hello Beautiful"**

Thank you for your purchase of the Love My Skin Luxury Glass Diffuser. Please read the instructions and safety tips before use.

### ATTACHMENT & SPECIFICATIONS

**STANDARD PACKAGING CONTAINS:**

1 x Love My Skin Diffuser      1 x USB Cable      1 x instruction manual

**FEATURES**

 
- Near silent operation
- Quick start
- Colour changing LED
- Fine mist
- USB-powered (plug adapter not included)

**SPECIFICATIONS**

Applicable area	15m <sup>2</sup> - 20m <sup>2</sup>	Material	PP+ABS+PC+Silicon
Working temperature	15-40°C	Dimension	Ø95x150mm
Input voltage	100 volts-240 volts AC	Ultrasonic rate	3.0MHz
Rated voltage	DC 5V	Accessories	<input type="checkbox"/> AC power adapter
Power consumption	Max 7.5 W		<input type="checkbox"/> USB Cable <input type="checkbox"/> User Manual
Tank Capacity	100ML	Quantity	X1
Misting output	≥15ml/hr	Weight	144g-169g
Packaging size	Max: 285x205x178mm	Gross	Max: 1172.1g
	Min 247x172x170mm		Min: 647.8g


— Page 1 —

### COMPONENTS

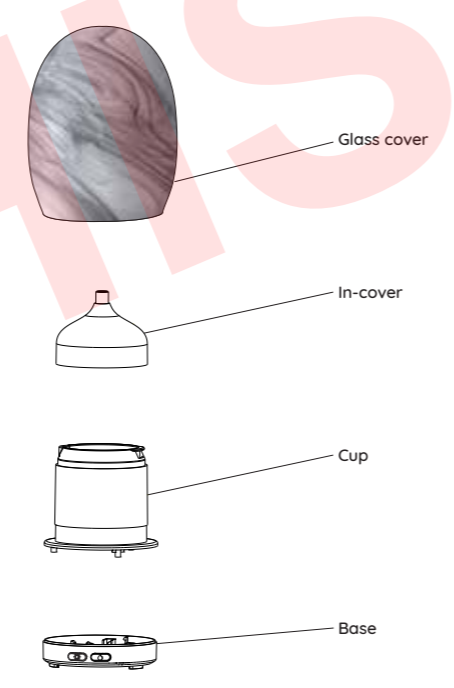

— Page 2 —

### OPERATION


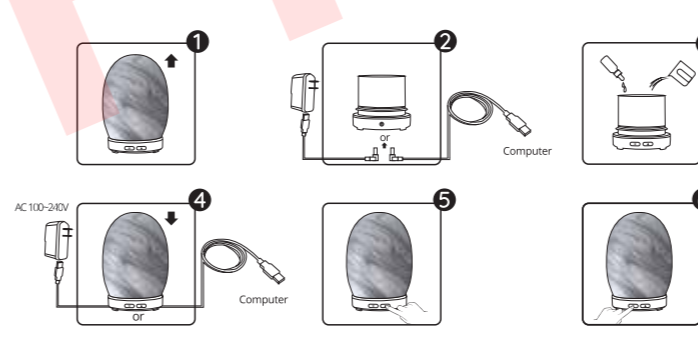 


- Place the diffuser correctly on a flat surface, remove the glass cover and the in-cover from the main body.
- Fill water tank with water, no higher than the maximum water level line (100ml). Add 2-3 drops of essential oils into the water tank. Essential oil can be more or less according to personal preference.
- Replace the in-cover and the glass cover to the original position of the main body. Plug adapter into USB slot of computer or Plug the AC adapter into the power socket.
- Press button to turn on the device and set as follows:  
 Press button first time to turn on and start mist continuously  
 Press button second time to turn off and stop mist  
 Press button third time to turn off and stop mist
- Press button to turn on the LED illumination and set LED mode:  
 • Diffuser comes with different LED lights to provide ambience that suits you.
- When the diffuser detects water is below the minimum threshold, the device will automatically enter standby mode. To reactivate repeat steps 1-6

— Page 3 —

### CLEANING & MAINTAINANCE

  - Unplug unit and pour out remaining water.
- Use soft cloth with water to clean the main body and outer shell lightly.
- After cleaning place in ventilated area to dry.
- Disinfect with cotton swab dipped in alcohol and clean the dirt of the ultrasonic plate gently (picture A).
- Replace the cover of the aroma diffuser (picture B).
- Store in cool dry place.

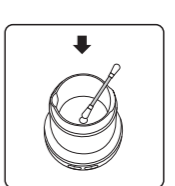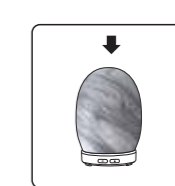**NOTE:**

- Do not use acid or alkaline or other strong cleaning agents on unit. May cause damage or discolouration.
- Change water daily. Do not use mineral water or water temperature above 15-40°C in unit.

— Page 4 —