



LOVE MY SKIN



SONIC FACIAL CLEANSER

LMSFC3

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and save it for further reference.

⚠ WARNING

- Do not use this appliance under the following conditions:
 - Pregnant women or while breastfeeding
 - Persons allergic to silicone
 - Persons with facial paralysis or facial nerve disorders
 - **If you had any facial fracture or plastic surgery on the face with the implantation of silicone, metal or plastic**
 - On areas with open wounds, severe dry skin and lumps
 - **If you have severe skin diseases and other skin conditions on the face**
- Verify the appliance before you start using it. Do not use this appliance if it has or appears to have any damage.
- **If you feel any discomfort while using the appliance, immediately stop using it and consult a doctor.**
- Do not attempt to modify, disassemble, or repair the appliance by yourself to avoid accidents.

⚠ CAUTION


- Do not share the use of this appliance with others.
- Keep the appliance out of reach of children.
- Do not immerse the appliance in water. Regularly clean the appliance and the accessories to extend its life time.
- This appliance is battery-operated. **If you do not use the appliance for a long time, remove the battery.**

Specifications:

- Name: Sonic Facial Cleanser
- Item NO.: LMSFC3
- Rated Voltage/Power: 1.5V $\overline{=}$ /520mW
- Type of Battery: AA 1.5V x 1 (not included)
- Size: 94mm x 42mm x 71mm (without brush head)
- Material: ABS, Silicone, TPE
- Executive Standard: Q/XMMJ1001-2015

Product Description (Picture 1):

- ① Cotton Pad
- ② Silicone Brush Head Cover
- ③ Velcro
- ④ Power Button
- ⑤ Battery Cover Buckle
- ⑥ Battery Cover

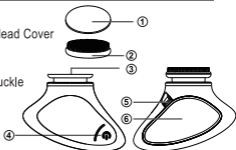

Picture 1

Operating Instructions:

※ Remove the Battery Cover, insert 1 AA battery and put the Battery Cover back on (picture 2) (battery is not included).



Picture 2

Silicone Brush Head Cover Replacement

To remove the Silicone Brush Head Cover, hold the appliance with one hand and pull the Silicone Brush Head Cover. To insert it, place one side of the brush cover on the appliance Velcro and insert the cover until it's in place (picture 3).



Picture 3

Daily Use

- Cleansing with Sonic Vibration

- 1) Wet the face with water.
- 2) Apply cleansing gel/cream to the palm of one hand, with the other hand hold the appliance and rub the Brush Head on the cleansing gel/cream to form a foam.
- 3) Apply the foam on the face. Use the appliance from the center to the sides of the face to cleanse. Recommended cleaning area, order and using time: forehead 20 secs → left and right cheeks 10-15 secs each → T-zone 20 secs → neck 30 secs (picture 4).



Picture 4

4) After using the appliance, turn it off, rinse your face with water and apply moisturizing lotion.

• Using the Cotton Pad

- 1) Use the sonic vibration with the Cotton Pad to effectively remove makeup and cleanse the skin.
- 2) Remove the Silicone Brush Head Cover and put the Cotton Pad on the Velcro. Press the Power Button to turn the appliance on, the low-speed mode automatically starts. Press the Power Button a second time to change to high-speed mode. Use the appliance on your face as recommended in picture 5.



Picture 5

Cleaning & Maintenance:

- 1) Make sure the appliance is turned off before you start cleaning it.
- 2) Do not immerse the appliance in water. Removable parts can be cleaned separately.
- 3) The surface of the appliance can be washed with water (do not immerse it) and dry it with a dry cloth.
- 4) Do not use any lubricant, detergent, polishing agents or air freshener on this appliance.
- 5) When cleaning the Brush Head, do not immerse it in hot water above 40°C and do not use corrosive liquids to clean it to avoid its deformation.
- 6) After the Brush Head is cleaned, place it in a ventilated place to dry (do not place it in direct sunlight).
- 7) It is recommended to replace the Brush Head every 3 months.

Service:

1. Eco-Friendly Tips

Batteries contain substances harmful to our environment. Please do not dispose of the appliance with the battery inside, remove the battery and recycle it for environmental protection.

2. Trouble Shooting

| Problem | Possible Cause | Solution |
|---|---|--|
| Appliance does not work | Battery is running low | Replace the battery |
| | Battery is out of power | |
| | Battery was installed incorrectly | Reinstall the battery correctly |
| Abnormal noise when using the appliance | The Silicone Brush Head Cover was installed incorrectly | Turn off the appliance and install the Silicone Brush Head Cover correctly as guided |
| Other problems | | Contact your local retailer |

Note: If the appliance still does not work properly after using above solutions, please stop using the appliance and contact your local retailer.



Symbol for "Manufacture Date".



Symbol for "Environment Protection" – Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.



Symbol for "Complies with EU requirements".



Model Reference.