



LOVE MY SKIN




LUXURY IONIC FACIAL STEAMER
HYDRATE, MOISTURISE & DEEP CLEAN

LMSFS2

Introduction

Thank you for choosing the Love My Skin Luxury Ionic Facial Steamer to help you achieve a dewy, radiant-looking complexion.

Please read the instructions before you use this device.

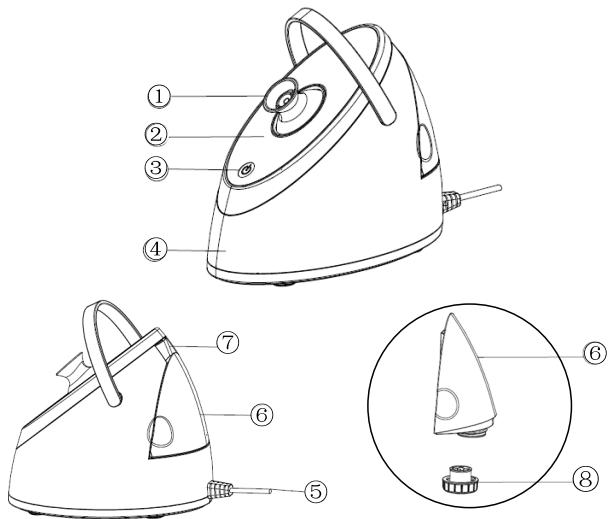

① Nozzle

② Mirror

③ Power Switch

④ Cover

⑤ Power Cord

⑥ Water Tank

⑦ Water Tank Closure

⑧ Water Supply Cap

WARNING: NO MODIFICATION OF THIS EQUIPMENT IS ALLOWED.

How To Use

1. Cleanse your face to remove any makeup, oil and dirt.
2. Place the appliance on a flat surface.
Release the water tank, unscrew the cap and fill with water.
Tighten the tank cap and return the tank to the main unit until you hear a click.
3. Plug in the unit and turn on the power button.
The hot steam will be released from the nozzle within 1 minute after the appliance power is turned on.
4. Close your eyes whilst the steam covers your face.
The steamer will run for a maximum of 15 minutes.
Use a cool cloth to close your pores and pat your face dry.



1

CLEANSE



2

FILL UP TANK



3

POWER ON



4

STEAM

How To Turn The Steamer Off:

1. Gently press the power button, the LED will turn off.
2. Unplug the power cord.
3. When cooled, empty the remaining water in by removing the tank from the base.
4. Clean the appliance and store in a ventilated atmosphere.

WARNING

Do not use wet hands to operate the device or use the power outlet.
Keep your face away from the nozzle.
Let the steamer unit cool before emptying the remaining water.

The thermostat will automatically shut down the steamer if the water runs out.
The appliance can resume within 30 seconds after the water is replenished,
however beyond this time the appliance will not power back on until after 3
minutes of cooling time.

Warnings

1. Do not use this device near water.
2. Do not use this device if you have sunburn, broken or irritated skin, swelling or have had skin related surgery.
3. Do not use this device if the device is damaged.
4. Do not disassemble or modify this device.
5. Avoid contact with steam with your eyes open.
6. Keep out of reach of children.
7. Always use the device on a flat surface.
8. Discontinue use if you experience any pain or discomfort.
9. Do not use this device on any infected areas of skin such as rashes or open wounds.
10. Do not use this device during pregnancy.
11. Do not use this product near flammable substances such as alcohol, oils and aerosol sprays etc.
12. Do not operate this device with wet hands and do not store in a damp or wet place, in doing so may result in electric shock.
13. Please use the dedicated water tank for water supply. Do not add any other substance.
14. Do not touch the steam outlet during use, do not insert any metal parts into the outlet, in doing so may lead to scalding, burn, shock or injury.

Device Specification

Model	Luxury Ionic Facial Steamer - LMSFS2
Rated operational voltage	AC 220V/50Hz
Rated operating power	220V/50Hz
Rated operational current	230w
Spray Amount	approx. 4.5ml/min Humidity 85% RH or less
Steam Temperature	40 degrees 20cm away from nozzle
Device Spec	Size: 175*108*155mm Weight: 590g

Please feel free to contact us at:



+44 (0) 1483 937967



hello@love-my-skin.co.uk



Love My Skin (Kinetik Medical Devices)
Unit 3, Perrywood Business Park
Honeycrook Lane, Salfords Redhill
RH1 5DZ. UK



LOVE MY SKIN



Symbol for "Manufacture Date".



Symbol for "Environment Protection" – Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.



Symbol for "Complies with EU requirements".



Symbol for "Complies with UK requirements".



Follow this instruction manual for your safety.



Model Reference.